

http://www.mil.ufl.edu/novasoft Copyright 1997, Mekatronix 1-888-MR-ROBOT

AGREEMENT

This is a legal agreement between you, the end user, and MekatronixTM. If you do not agree to the terms of this Agreement, please promptly return the purchased product for a full refund.

- 1. **Copyright Notice.** MekatronixTM hereby grants to any individuals or organizations permission to reproduce and distribute copies of this document, in whole or in part, for any personal or non-commercial educational use only. This copyright notice must accompany any copy that is distributed.
- 2. **Copy Restrictions.** Other than cases mentioned in **Copyright Notice**, no part of any MekatronixTM document may be reproduced in any form without written permission of MekatronixTM. For example, MekatronixTM does not grant the right to make derivative works based on these documents without written consent.
- 3. **Software License.** MekatronixTM software is licensed and not sold. Software documentation is licensed to you by MekatronixTM, the licensor and a corporation under the laws of Florida. MekatronixTM does not assume and shall have no obligation or liability to you under this license agreement. You own the diskettes on which the software is recorded but MekatronixTM retains title to its own software. You may not rent, lease, loan, sell, distribute MekatronixTM software, or create derivative works for rent, lease, loan, sell, or distribution without a contractual agreement with MekatronixTM.
- 4. Limited Warranty. MekatronixTM strives to make high quality products that function as described. However, MekatronixTM does not warrant, explicitly or implied, nor assume liability for, any use or applications of its products. In particular, MekatronixTM products are not qualified to assume critical roles where human or animal life may be involved. For unassembled kits, you accept all responsibility for the proper functioning of the kit. MekatronixTM is not liable for, or anything resulting from, improper assembly of its products, acts of God, abuse, misuses, improper or abnormal usage, faulty installation, improper maintenance, lightning or other incidence of excess voltage, or exposure to the elements. MekatronixTM is not responsible, or liable for, indirect, special, or consequential damages arising out of, or in connection with, the use or performances of its product or other damages with respect to loss of property, loss of revenues or profit or costs of removal, installation or reinstallations. You agree and certify that you accept all liability and responsibility that the products, both hardware and software and any other technical information you obtain has been obtained legally according to the laws of Florida, the United States and your country. Your acceptance of the products purchased from MekatronixTM will be construed as agreeing to these terms.

NETWORK SITE: http://member.aol.com/meksales

MANIFESTO

MekatronixTM espouses the view that the personal autonomous agent will usher in a whole new industry, much like the personal computer industry before it, if modeled on the same beginning principles:

- Low cost,
- Wide availability,
- Open architecture,
- An open, enthusiastic, dynamic community of users sharing information.

Our corporate goal is to help create this new, exciting industry!

http://www.mil.ufl.edu/novasoft Copyright 1997, Mekatronix 1-888-MR-ROBOT

TALRIK JUNIOR, affectionately known

as TJ, is an excellent robot for introducing you to the exciting area of programmable, autonomous, mobile robots. *Programmable* means that TJ has a computer on board that allows you to change its behaviors. *Autonomous* indicates that TJ can act on its own without being directly controlled by a person. *Mobile*, of course, tells us that TJ can move around!





A completed TJ has a 7-inch radius and 3.5 inch height. He is constructed from beautiful, 5-ply model aircraft plywood and rides on wheels and a rear skid. Two gearhead motors mounted underneath the platform drive the wheels, one motor per wheel. The computer on TJ serves as the robot brain. TJ has very little memory: 256 bytes of RAM and 2 KBytes of EEPROM.

Most of TJ's electronics fit under a removable top plate that hinges in front and locks down in the back with a wooden key. TJ possess two IR detectors and two IR emitter headlights in the front. An IR emitter taillight mounts in the back underneath the plate. A plastic bumper encircles TJ's waist. Four contact switches, three in front and one in back, allow TJ to detect front or back collisions.

You can add more sensors to TJ to help him detect more about his environment. Programming TJ requires additional hardware and a personal computer. A serial communication link allows the user to upload and download TJ data and programs from a PC. You can program TJ with a programming language called C or in the Assembly Language of the microprocessor.

http://www.mil.ufl.edu/novasoft Copyright 1997, Mekatronix 1-888-MR-ROBOT

Biology of Robots

INTRODUCTION

You need:

A TJ Robot A Pencil This Worksheet

Our eyes are detectors which are designed to detect visible light (or visible radiation). Visible light is one of the types of radiation that can penetrate the Earth's atmosphere and be detected on the Earth's surface. There are also forms of light (or radiation) which we cannot see. Actually we can only see a very small part of the entire spectrum of radiation called the electromagnetic spectrum. The entire spectrum includes gamma rays, X-rays, ultraviolet, visible, infrared, microwaves, and radio waves. The only difference between these different types of radiation is their wavelength, or frequency. In addition to visible light, radio and some infrared radiation can also penetrate the Earth's atmosphere. Our atmosphere blocks out the rest.

TJ uses infrared (IR) radiation to see. The IR light is emitted from each of the "headlights" on TJ's head. There are detectors, or "eyes", under the head that can see the IR light and tell TJ's brain (the computer) how bright the light is. The infrared light reflects off objects and returns to the detectors. If an object is closer to TJ, the reflected light is brighter, and if the object is further away from TJ, the light is dimmer.

Because this is a different form of radiation from what we can see, TJ's world is different from ours. While we see the colors red, orange, yellow, green, blue, and black, TJ sees only shades of black, white and gray. Dark colors are hard for TJ to see because the IR light is not reflected from dark colors as well as from light colors. Since TJ can see lighter colors better than dark colors, it will turn away from the lighter colored objects sooner than it will for darker ones.


http://www.mil.ufl.edu/novasoft Copyright 1997, Mekatronix 1-888-MR-ROBOT

TJ EXPERIMENTS:

Experiment 1

If the robot bumps into something, what does it do?	
Set TJ beside one of the cracks in the tiles, and turn it on. Does the robot go straight veer to one side?	or does it
If TJ veers to one side, which way does it move? This is similar to right-handedness and left-handedness in people!	
When you hold the barrier slightly to the right of the robot, what does it do? Approximately how close to the paper does TJ get before it does this?	
When you hold the barrier slightly to the left of the robot, what does it do? Approximately how close to the paper does TJ get before it does this?	
Open the barrier and hold it in front of TJ as shown. What does TJ do?	
This situation is called a Braitenburg Trap. Try changing the angle of the corner as shown and record what happens.	


Try these configurations first and record what happens:

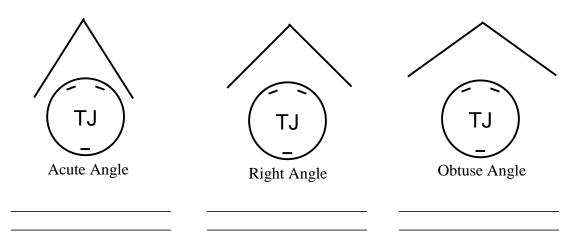


http://www.mil.ufl.edu/novasoft Copyright 1997, Mekatronix

1-888-MR-ROBOT

Slide one side of the TJ barrier toward TJ while holding the other side still. What does TJ do?

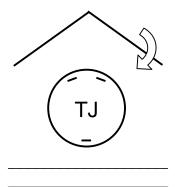


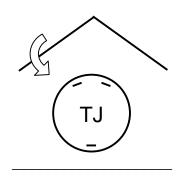

Now move the whole barrier forward toward the TJ robot. What happens?

If you put two TJs facing each other, how do they react?

When TJ sees something to the **left**, it turns ______. When TJ sees something to the **right**, it turns ______.

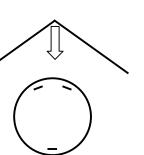

http://www.mil.ufl.edu/novasoft Copyright 1997, Mekatronix 1-888-MR-ROBOT

Get together with other groups and build an arena for your TJs. What does the TJ do?

Experiment 2

	Which way does TJ circle the arena?
	If you turn TJ around and run it the other way around the arena, does t make a tighter circle?
	Is your TJ left-handed or right-handed? In other words, which way send it straight?
	opposite handed-ness in the arena. Does it make a smaller circle in e or counter-clockwise) as yours?
What happens if you block T	J's path while it is circling?
	e arena so you can see how wide the hole has to be before TJ can nole have to be?
Experiment 3	
Aim the remote at the floor a	little in front of the robot and hold down a button. What happens?
	I directly at the robot's eyes and hold down a
From approximately how far	away can you still affect the robot?
Experiment 4	
Aim the remote control in fro	ont and to the left and right of TJ. What does TJ do? Aim to the Right:
Try the same things using a T	ΓJ in place of the remote control. What happens?

http://www.mil.ufl.edu/novasoft Copyright 1997, Mekatronix 1-888-MR-ROBOT

Turn the TJ on and hold it in front of the camera. What do you see?

Hold the remote control in front of the camera and hold down a button. What do you see?

What do TJ and the remote control have in common?

Experiment 5

Go to your robot teachers to reprogram your robot.

Plug the 6-wire cable into TJ's head. Switch the robot to **Download** mode, and turn the power on. Watch the lights on the communications board. One of them should flash every time you push the **RESET** button. If this does not happen, then the cable is plugged in backwards on the robot. Pull it out, turn it around and plug it in, then try again.

When the robot is plugged in correctly, you can try some of the experiments your robot teachers will give you.

What happens to the lights on the communications board while the TJ is being programmed?

What do these lights mean? (HINT: Ask your robot teachers.)

http://www.mil.ufl.edu/novasoft Copyright 1997, Mekatronix 1-888-MR-ROBOT

GLOSSARY

Angle

Acute Angle – Angle with measure less than 90°. **Obtuse Angle** – Angle with measure greater than 90°. **Right Angle** – Angle with measure 90°.

Braitenburg Trap

Oscillations generated during collision avoidance when the robot sensor input on the right and left dictate opposite turning motion simultaneously. The net result is the robot cannot "decide" which way to move and just rapidly vibrates alternately to the left and right.

Infrared Light

invisible electromagnetic radiation that has a longer wavelength than visible light and is detected most often by its heating effect

RAM

Random Access Memory. A computer can read and write information to this type of memory. When electrical power is removed from a RAM, the contents of memory are lost.

EEPROM

Electrically Erasable Programmable Read-Only-Memory. Usually, the computer only reads this memory. When electrical power is removed from an EEPROM, the contents of memory do not change. Special electrical signals must be used to write to this memory and the writing process is very slow compared to reading.